

# **Whale X4150 Digital Amplifier**

## **User Manual**

## Preface

The purpose of this section is to ensure that the user is able to use the product correctly through this manual in order to avoid danger in operation or property damage. Before using this product, please read the product manual carefully and keep it for future reference.




### Outlined

This manual applies to Digital Amplifier.

This manual describes the functions and use of the various functional modules of the Digital Amplifier, and guides you through the installation and commissioning of the Digital Amplifier.

### Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 <b>Note</b>	Provides additional information to emphasize or supplement important points of the main text.
 <b>Caution</b>	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 <b>Danger</b>	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

### Safety Instructions

#### **Danger**

To ensure reliable use of the equipment and the safety of personnel, please observe the following during installation, use and maintenance:

- During the installation and use of the equipment, all electrical safety regulations of the country and the region of use must be strictly observed.
- When installing the equipment, make sure that the input power of the equipment power adapter is 100V-240V, 50/60Hz AC power.
- Keep the working environment well ventilated so that the heat generated by the equipment during operation can be discharged in time to avoid damage to the equipment due to excessive temperature.

- Always unplug the unit's power adapter from the AC power outlet before: A. Removing or reinstalling any part of the equipment; B. Disconnecting or reconnecting any electrical plug or connection of the equipment. Do not operate with electricity.
- There are AC high-voltage parts in the equipment, non-professionals should not disassemble them without permission to avoid the risk of electric shock. Do not repair the equipment privately to avoid aggravating the damage.
- Do not spill any corrosive chemicals or liquids on or near the equipment.
- If the unit emits smoke, odour or noises, turn off the power immediately and unplug the power cord, and contact your dealer or service centre.
- If the appliance is not working properly, contact the shop where you purchased the appliance or the nearest service centre and do not disassemble or modify the appliance in any way. (We cannot be held responsible for problems caused by unapproved modifications or repairs).

**Caution**

- Do not drop objects on the equipment or vibrate the equipment vigorously, and keep the equipment away from locations with magnetic field interference. Avoid installing the equipment in a place where the surface vibrates or is susceptible to shock (neglecting this may damage the equipment).
- Do not use the equipment in high temperature, low temperature or high humidity environments. Refer to the equipment's data sheet for specific temperature and humidity requirements.
- Use the unit indoors, not in an exposed installation where it may be exposed to rain or extreme humidity.
- When the equipment is not used for a long period of time or in a humid and dewy environment, the main power supply of the equipment should be switched off.
- When cleaning the equipment, please use a sufficiently soft dry cloth or other alternatives to wipe the internal and external surfaces, do not use alkaline detergent to wash, and avoid hard objects to scratch the equipment.
- Please keep all the original packaging materials of the equipment properly, so that in case of problems, use the packaging materials to pack the equipment and send it to the agent or return it to the manufacturer for processing. We will not be responsible for any accidental damage in transit not caused by the original packaging materials.

**Note**

- Requirements for the quality of installation and commissioning personnel  
Qualifications or experience in the installation and commissioning of audio and video systems and qualifications to perform related work, in addition to the knowledge and operational skills listed below.
  - Basic knowledge and installation skills of audio and video systems and components.

- Basic knowledge and skills in low voltage cabling and wiring of low voltage electronics.
- Basic audio and networking knowledge and skills and the ability to read and understand the contents of this manual.

TABLE OF CONTENTS

Chapter 1 Product Introduction ..... 1

    1.1 Introduction ..... 1

    1.2 Product Features ..... 1

Chapter 2 Interface Description ..... 1

    2.1 Front Panel ..... 1

    2.2 Rear Panel ..... 2

Chapter 3 User Guide ..... 2

    3.1 Device Connection ..... 2

    3.2 Stereo mode ..... 3

    3.3 Mono mode ..... 3

    3.4 Bridge mode ..... 4

Chapter 4 Specification ..... 4

## Chapter 1 Product Introduction

### 1.1 Introduction


This is a 4-channel 150W Class D digital amplifier that supports power supply over-current protection, amplifier DC output protection, temperature protection, and overload protection. It can also be cascaded with multiple devices.

### 1.2 Product Features

- High-capacity switching power supply amplifier;
- Supports stereo mode and bridge mode;
- Balanced input connectors;
- SpeakON output connectors;
- Both the amplifier section and the switching power supply section have independent cooling systems;
- The cooling fans are controlled by an advanced variable-speed circuit;
- 1U design, lightweight chassis, easy to carry and install.

## Chapter 2 Interface Description


### 2.1 Front Panel

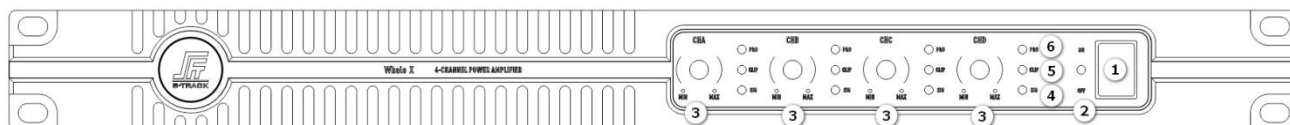

- ① Power switch: Turn the amplifier's power on or off;
- ② ON/OFF: Power indicator, the indicator light is always on to indicate that the device is powered normally;
- ③ Potentiometer: Adjusts the volume of the analog signal input to the amplifier;
- ④ Signal indicator light: When there is an audio signal input to the device, the indicator light flashes. When there is no signal input, the indicator light turns off;

- ⑤ Clipping indicator light: When audio signals are distorted, this indicator light flashes. When the indicator light remains lit, the signal is severely distorted. At this point, the input level should be reduced until the signal indicator light returns to normal;
- ⑥ Protected mode indicator light.

## 2.2 Rear Panel

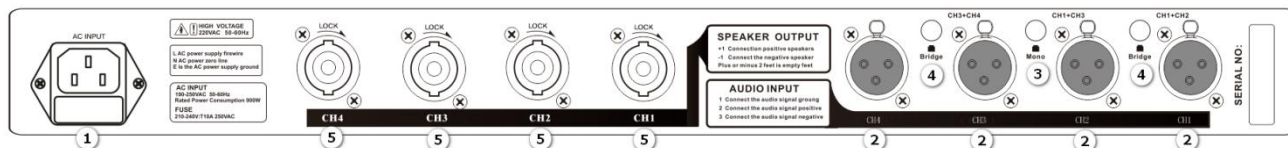


- ① AC INPUT: Power supply interface, connect AC 220V power supply;
- ② Signal input connector: Analog signals entering the amplifier are input via the input connector and connected to a DSP, mixing console etc.;
- ③ Mono mode: Press to set mono mode;
- ④ Bridge mode: Press to set bridge mode;
- ⑤ Signal output connector: The analog signal amplified by the amplifier is output from the output connector and connected to the speaker.

## Chapter 3 User Guide


### 3.1 Device Connection

The amplifier's input connections support XLR balanced connectors, while the output interfaces support speakON Loudspeaker Connectors. The wiring configuration is as follows:

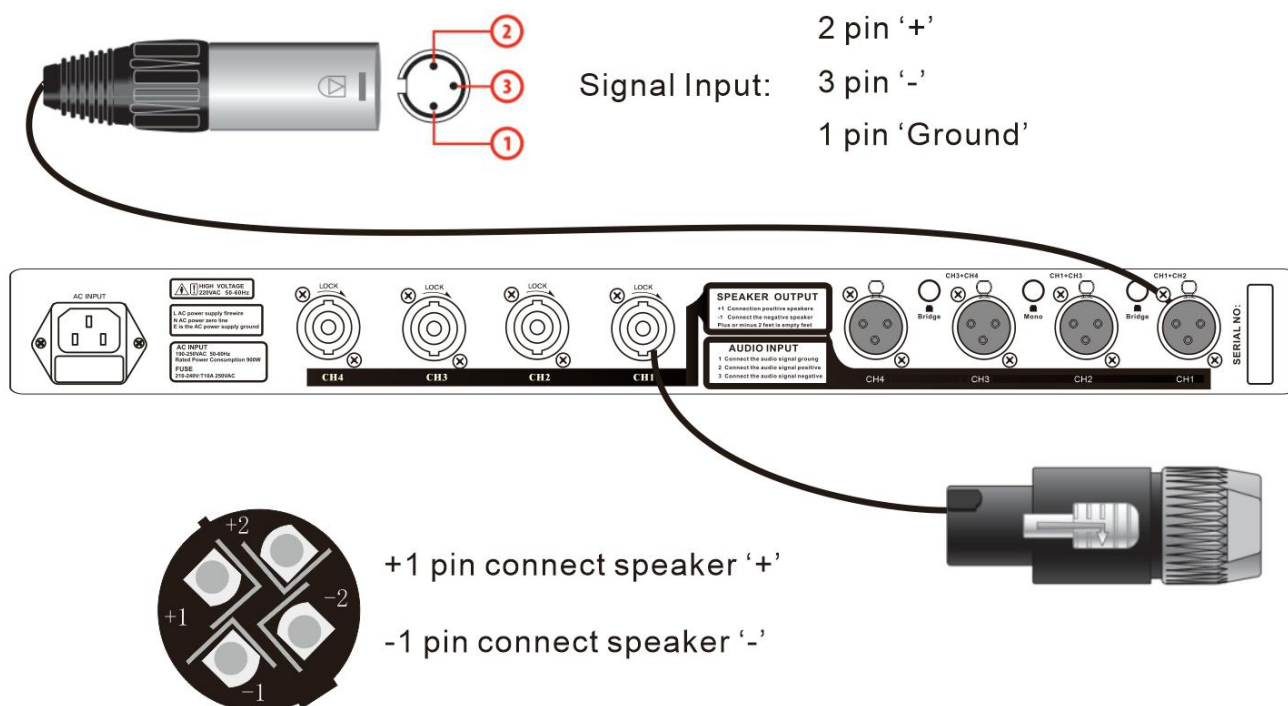

### 3.2 Stereo mode

4-Channel Stereo mode, factory default setting is stereo mode, picks up the music signal from the front end (such as Mixing Console and DSP etc.) through the signal input connectors, then sends it to the speaker through the amplifier output connectors, enabling the amplifier to amplify it effectively. Connection as shown in the figure below:

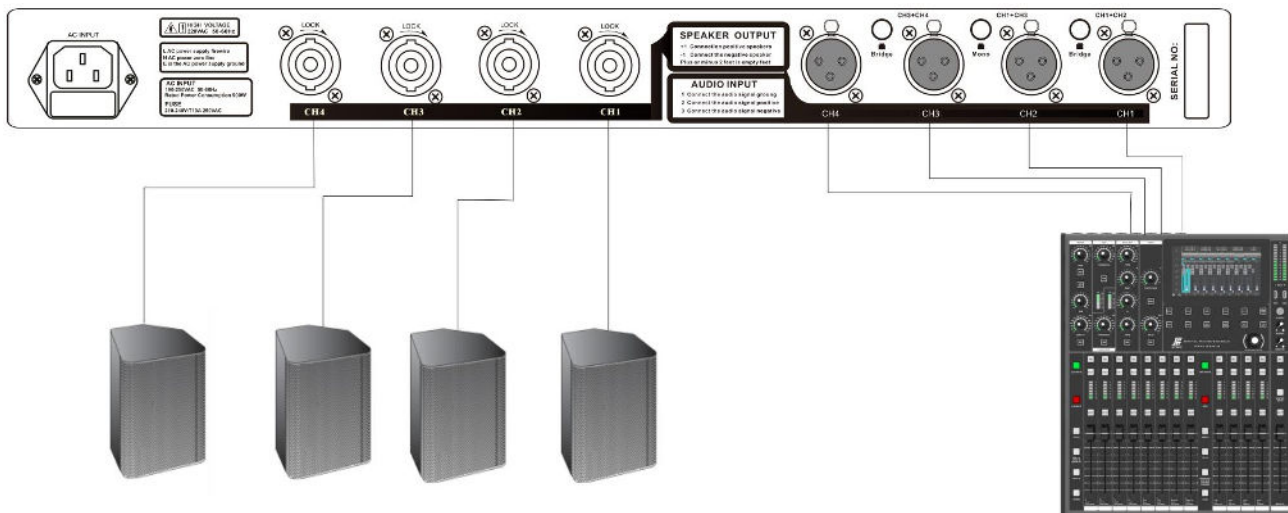


### 3.3 Mono mode

2-Channel Mono mode, picks up the music signal from the front end (such as Mixing Console and DSP etc.) through the signal input connectors, then sends it to the speaker through the amplifier




output connectors, enabling the amplifier to amplify it effectively. Connection as shown in the figure below:

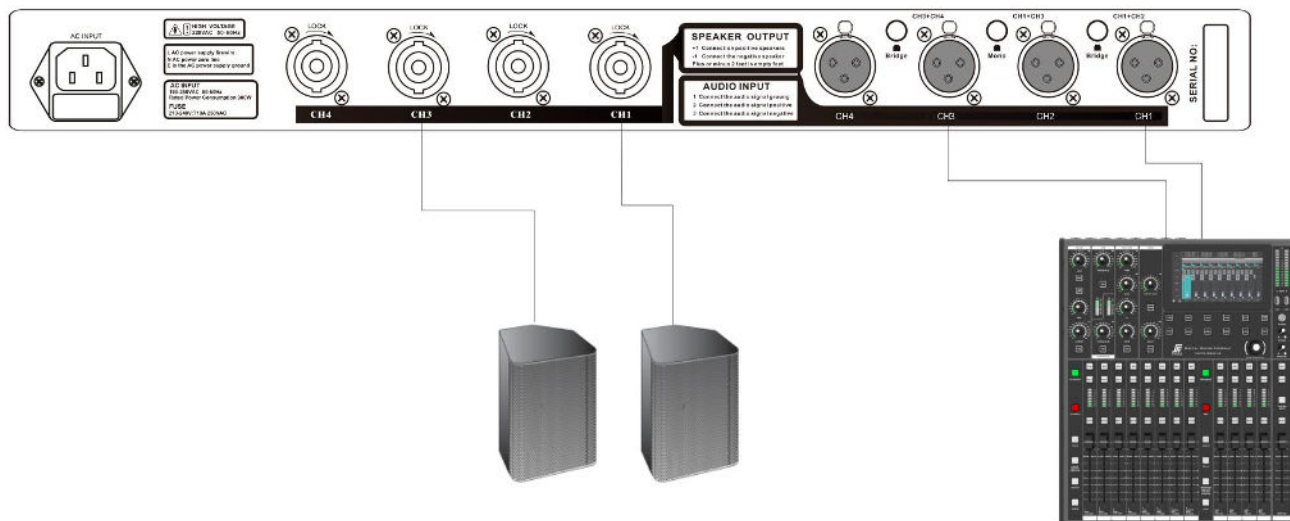

### 3.4 Bridge mode

2-Channel Bridge mode, press the "Bridge" button to set it to Bridge mode, picks up the music signal from the front end (such as Mixing Console and DSP etc.) through the signal input connectors, then sends it to the speaker through the amplifier output connectors, enabling the amplifier to amplify it effectively. Connection as shown in the figure below:

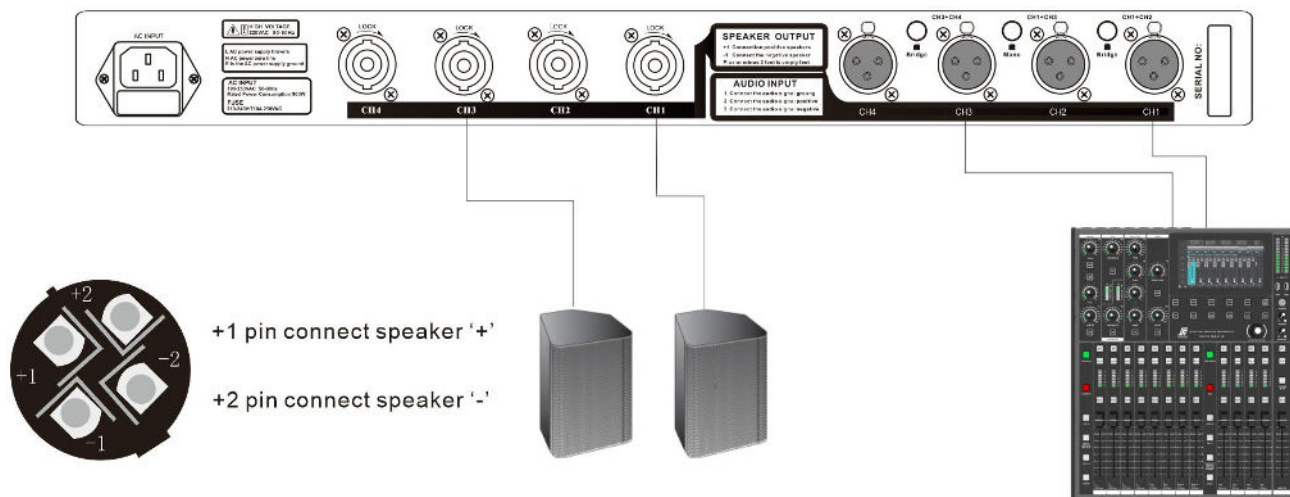

## Chapter 4 Specification

Stereo 8Ω Output Power	4×150W
Stereo 4Ω Output Power	4×250W

Bridge 8Ω Output Power	2×500W
Input Sensitivity	0.77V (1kHz)
Input Impedance	10kΩ, balanced
Signal to Noise Ratio	103dB
Frequency Response	20Hz~20kHz ±1dB
Circuit Protection	Power supply over-current protection, amplifier DC output protection, temperature protection, overload protection
Operating Voltage	AC 220V 50Hz
Operating Temperature and Humidity	0℃~50℃, 10%~90%RH, No condensation
Chassis	1U
Product Dimensions	482.4mm×320mm×44mm
Net Weight	4.9Kg
Package Dimensions (L×W×H)	545mm×440mm×115mm
Package Weight	6.2kg

# Warranty Regulations

The warranty period of this product is 1 year.

In the warranty period of non-man-made damage caused by the product performance failure can enjoy three packages of service.

Warranty card by the sales unit stamped after the effective. The alteration is invalid!

**The following conditions (including, but not limited to, this) are not covered by the three-package service:**

1. No warranty card or missing valid invoice or the date has exceeded the validity period of the three packages of services;
2. Not in accordance with the requirements of the product instructions for use, maintenance, management and damage caused;
3. The product model or code on the warranty voucher does not match the physical goods;
4. Damage caused by the dismantling and repair of non-authorized service providers;
5. Normal discolouration, wear and tear and consumption during the use of the product are not covered by the warranty;

The product cannot be used due to the user's own network reasons, please consult customer service staff.



**SHENZHEN S TRACK SCIENCE TECHNOLOGY CO., LTD**

---

Web: [www.s-track.com.cn](http://www.s-track.com.cn)

Tel: +86 755 29983191

Mail: [service@s-track.cn](mailto:service@s-track.cn)

Add: 9F, 1B, Shangzhi Technology Park, Guangming District, Shenzhen City, Guangdong Province, China 518107